AURIOL®

VIBRATION ALARM CLOCK

GB IE User manual and service information

DK Brugervejledning og serviceinformation

GB IE MT

Vibrating Alarm Clock Auriol VWS2010

Operating and Safety Instructions 2

DK

Vibrerende vækkeur Auriol VWS2010

Brugs- og sikkerhedsanvisninger..... 23

IAN 49049

Version v1.9

Introduction

Thank you for purchasing this alarm clock with an additional vibrating alarm.

This alarm clock signals the set alarm time with an alarm sound, a flashing light and if required, also with a vibrating pad. The display shows the date and time.

Package Contents

- Alarm clock VWS2010
- Vibrating pad
- User manual with service information
- Power adapter TYT70600030EU
  6V⎓, 300 mA

Table of Contents

Introduction 2
Package Contents 2
Table of Contents 3
Important Safety Instructions 4
Operating Environment 4
Children and Persons with Disabilities 5
Power Adapter and Batteries 6
Intended Use 7
Conformity Notice 8
Overview 9
The Display 11
Getting Started 12
Connecting the Power Adapter 12
Inserting the Batteries 12
Setting the Language 14
Operation 14
Setting the Time and Date 14
Setting the Alarm Clock 16
Connecting the Vibrating Pad 17
The Repeat Alarm 18
Selecting an Alarm Sound 18
Appendix 19
Repair and Maintenance 19
Technical Specifications 20
Disposal of Old and Defective Devices 21
Warranty Information 22
Declaration of conformity 44

Important Safety Instructions

Before you use this device for the first time, please read the following notes in this manual and heed all warnings, even if you are familiar with handling electronic devices. Keep this manual safe for future reference. If you sell the device or pass it on, it is essential you hand over this manual also.

This icon denotes important information for the safe operation of the product and for the user's safety.

This symbol denotes further information on the topic.

Operating Environment

The device is not for use in rooms with a high temperature or humidity (e.g. bathrooms), and must be kept free of dust. Operating temperature and operating humidity: 5°C to 40°C, max. 90% RH. The device may not be used outdoors or in tropical climates. This product has not been designed for corporate or commercial applications. Use the product in domestic environments for private applications only. Any use other than that mentioned above does not correspond to the intended use.

Always make sure that:

- no direct heat sources (e.g. heating) affect the device;
- no direct sunlight or artificial light reaches the device;
- never place the device in the immediate vicinity of magnetic fields (e.g. loudspeakers);
- do not place any fire sources (e.g. burning candles) on or near the device;
- no foreign bodies are introduced into the device;
- the device should not be subject to any sharp temperature changes.
- Do not place any recipients containing liquids (beverages, vases, etc.) onto or next to the device.

Children and Persons with Disabilities

Electrical appliances do not belong in the hands of children. People with disabilities should only use electrical devices in appropriate circumstances. Do not allow children or persons with disabilities to use electrical devices when not under supervision. These may not comprehend the presence of potential risks. Batteries and small parts represent potential choking hazards. Keep the batteries in a safe place. If a battery is swallowed, seek medical

help immediately. Keep the packaging away from children and persons with disabilities too as there is danger of suffocation.

Power Adapter and Batteries

In order to completely disconnect the device from the mains, the power adapter must be pulled out from the wall outlet. For this reason, the device should be positioned in a way that assures unobstructed access to the power outlet so that the power adapter can be immediately pulled out in an emergency situation. To avoid the danger of fire if the power adapter is not going to be used for a long while (e.g. during holidays) it should always be disconnected from the power socket.

During a thunderstorm unplug the power adapter from the mains in order to avoid any damage to the device.

Insert the batteries with the correct polarity. Never try to recharge the batteries and under no circumstances throw them into fire. Remove batteries when the device is not to be used for a long time. Non-intended use may cause explosion and danger to life.

Intended Use

This is a consumer electronics device. It may only be used for private use, not industrial or commercial purposes. In its default configuration, this product has not been designed for medical, lifesaving, rescue or life-maintaining purposes. Furthermore, the device may not be used in tropical climates. Only connection cables and external devices may be used that comply with safety standards and the electromagnetic compatibility and shielding quality of this device. This device fulfils all that relates to CE Conformity, relevant norms and standards. Any modifications to the equipment other than recommended changes by the manufacturer may result in these directives no longer being met. The manufacturer is not liable for any damage or interference caused by unauthorized modifications. Only use the accessories recommended by the manufacturer. Do not use this device for purposes other than those indicated and do not modify it in any way. Any use other than that mentioned above does not correspond to the intended use.

Conformity Notice

This device has been tested and approved for compliance with the basic and other relevant requirements of the EMC Directive 2004/108/EC and the Low-voltage Directive 2006/95/EC, as well as the ecological design criteria according to the Commission Regulation 278/2009 to implement the Directive 2009/125/EC. The corresponding Declaration of Conformity can be found at the end of this User's Manual.

Overview

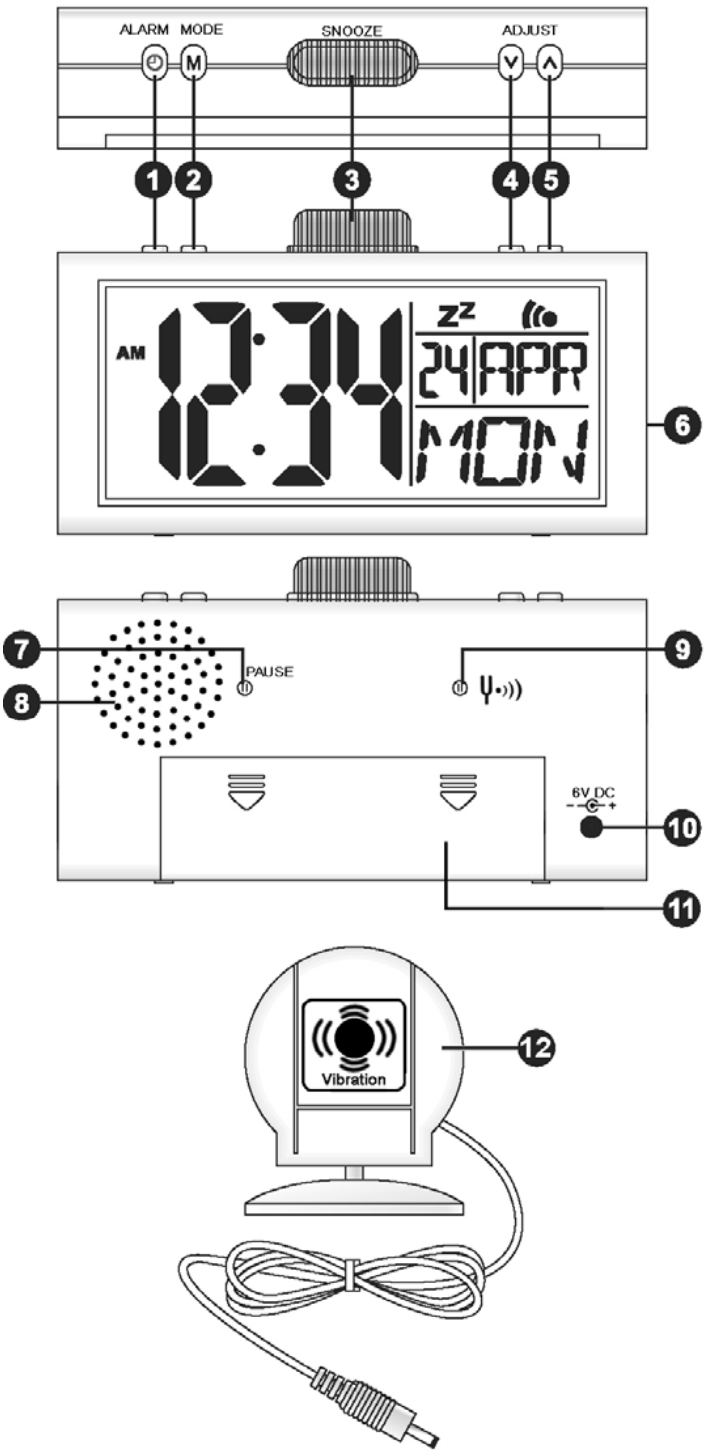
ALARM
MODE
SNOOZE
ADJUST
1
2
3
4
5
AM
12:34
24 APR
MON
6
7
8
PAUSE
9
6V DC
10
11
Vibration
12

1 ALARM
Enables or disables the alarm: choose between four different wakeup times

2 MODE
Sets the time, date and wakeup time

3 SNOOZE
Repeats the wakeup signal after 9 minutes

4 ADJUST ▼ (Previous setting)

5 ADJUST ▲ (Next setting)

6 Receptacle for vibrating pad

7 PAUSE
Disables the Repeat Alarm

8 Speaker

9 TONE
Selects the alarm sound

10 Receptacle for power adapter

11 Battery compartment
(for 4x AA-sized batteries)

12 Vibrating pad with stand and connector cable

The Display

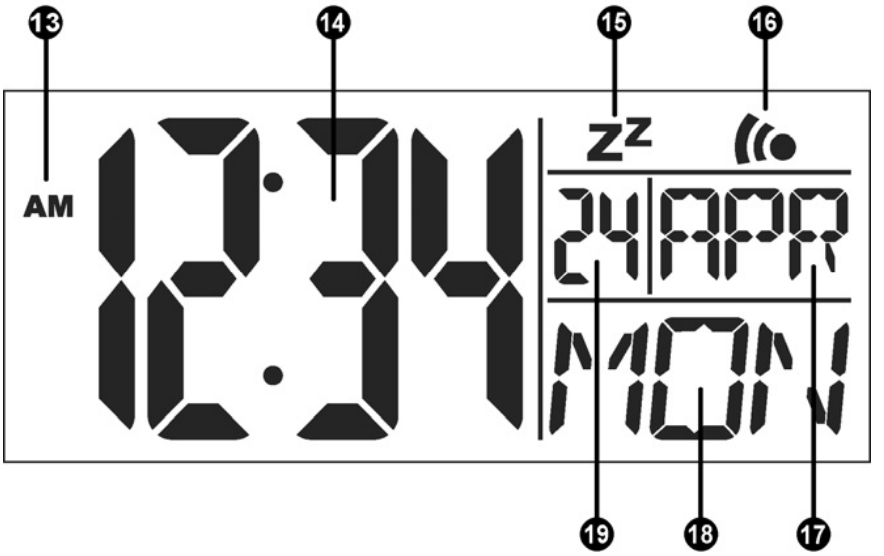

13 Morning and afternoon icons
AM: Morning
PM: Afternoon

14 Time

15 Repeat Alarm icon

16 Alarm enabled icon

17 Month indicator

18 Week indicator

19 Day indicator

Getting Started

Connecting the Power Adapter

In order to completely disconnect the device from the mains, the power adapter must be pulled out from the wall outlet.

You may optionally power the device by using conventional batteries. However, do not use both means of power supply at the same time. Remove batteries before connecting the power adapter.

- Plug the connector cable of the power adapter into the receptacle on the device.
- Plug the power adapter into an easily accessible wall outlet.

If the device has been separated from the mains, when it is next powered on it must be set once again.

Inserting the Batteries

You can operate the device with batteries. To do so use four AA-sized batteries, 1.5 V (not included in package contents).

- Open the alarm clock's battery compartment (11) by pushing the back panel cover in the direction of the arrow mark.
- Insert the batteries (size AA) into the unit. Make sure that the batteries are properly aligned according to the polarity (+ and -). The correct polarity is labelled on the batteries and inside the battery compartment.

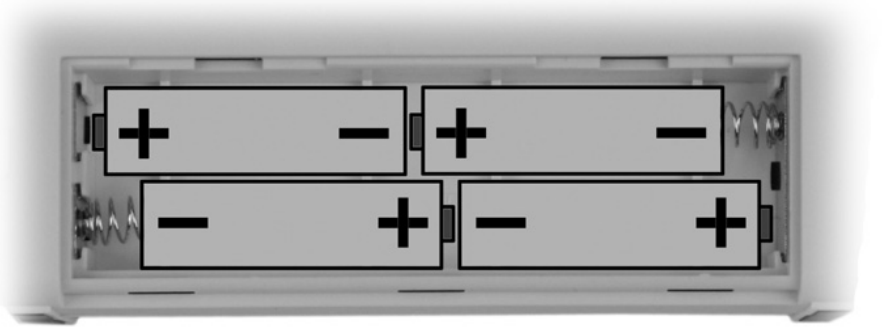

- Slide the battery compartment cover onto the alarm clock housing.

When the time display is very dimmed it is time to replace the batteries. When this happens, replace the batteries with new batteries of the same type. After replacing the batteries it is necessary to set all parameters again.

Setting the Language

When you power on the device, the set language is English and the day indicator flashes with the country code "GB". The following languages can be selected:

GB	English
FR	French
NL	Dutch
PT	Portuguese
ES	Spanish
DE	German
DK	Danish

- Press ADJUST ▼ (4) or ADJUST ▲ (5) to select your preferred language.
- Press the MODE button (2) to save the setting.

Operation

Setting the Time and Date

- Press and hold the MODE (2) button until the hours indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the hours of the current time.

- Press the MODE (2) button until the minute indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the minutes of the current time.

- Press the MODE (2) button until the month indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the current month.

- Press the MODE (2) button until the day indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the current day.

- Press the MODE (2) button until the year number on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the current year.

- Press the MODE (2) button, the 12- or 24-hour indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to toggle between the 12-hour or 24-hour time display.

- Press the MODE (2) button, the set language flashes on the display.
- Press ADJUST ▼ (4) or ADJUST ▲ (5) to select your preferred language. You'll find an explanation of the displayed abbreviations in the table found in the chapter "Setting the Language".

- Press the ALARM button (1) to quit the process.

The weekday will be calculated according to the set information and displayed automatically.

Setting the Alarm Clock

You can set four different wakeup times with this alarm clock. By pressing the ALARM (1) button multiple times you can toggle between the four alarm times on the display.

- Press the ALARM (1) button as often as necessary until the alarm time is displayed that you want to change or set.
- Press and hold the MODE (2) button until the ON / OFF option (16) on the display flashes.
- Press ADJUST ▼ (4) or ADJUST ▲ (5) to select between the options ON (alarm enabled) or OFF (alarm disabled).

- Press the MODE (2) button until the hour indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the hour of the desired alarm time.

- Press the MODE (2) button until the minute indicator on the display flashes.
- Use ADJUST ▼ (4) or ADJUST ▲ (5) to select the minutes of the desired alarm time.

- Press the ALARM button (1) to quit the process.
- An enabled alarm time icon (16) will show on the display.

Connecting the Vibrating Pad

You can optionally mount the vibrating pad (12) in the supplied stand or separate it from the stand to place it, for example, under your pillow. When the alarm time is reached, the vibrating pad vibrates and the signal light flashes.

- Plug the connector cable plug of the vibrating pad into the receptacle (6).
- Lie or stand the vibrating pad in the desired position.

The Repeat Alarm

The Repeat Alarm function is automatically enabled, the Repeat Alarm icon (15) flashes. You can interrupt the wakeup signal with the SNOOZE (3) button. After nine minutes the alarm is activated again.

- You can disable the current Repeat Alarm on the back of the alarm clock.
- Press the PAUSE button (7) to switch off the Repeat Alarm function.
- The Repeat Alarm icon (15) will light steady on the display.

Selecting an Alarm Sound

- Press the TONE (9) button on the back of the device multiple times to select one of the six different alarm sounds.

Appendix

Repair and Maintenance

Repairs are required when the devices have been damaged in any way, for example, when liquid or objects have entered the interior of the housing, when the products have been exposed to rain, when the products do not work normally or if the products have been dropped. If smoke, unusual noises or smells are noticed, immediately pull out the power adapter or remove the batteries. In these cases the devices should not be used further and should be inspected by authorized service personnel. Please contact qualified personnel when repair is needed. Never open the housing of the alarm clock or the vibrating pad. Only use a clean, dry cloth for cleaning the devices. Never use any corrosive liquids.

Technical Specifications

Model	Vibrating Alarm Clock Auriol VWS2010
Power Supply	Power adapter TYT70600030EU TaiyTech Input: 100-240 V~ 50/60Hz Output: 6V ⎓ 300 mA or 4 AA-sized batteries 1.5 V
Power consumption	6V / 300mA
Operating temperature and humidity	5 °C to 35 °C, max. 90% RH
Storage temperature and humidity	5 °C to 45 °C, max. 90% RH
Weight of alarm clock and vibrating pad	311g
Alarm clock dimensions	168 x 80 x 40 mm (W x H x D)

Disposal of Old and Defective Devices

Devices marked with this symbol are subject to the European Directive 2002/96/EC. All electric and electronic devices must be disposed of separately from household waste at established bodies.

Avoid hazards to the environment and dangers to your personal health by disposing of the device properly. For further information about proper disposal, contact your local government or disposal bodies.

Respect the environment. Old batteries do not belong in with domestic waste. They must be handed in to a collection point for old batteries. Recycle the packaging material properly also. Cardboard packaging can be taken to paper recycling containers or public collection points for recycling. Any films or plastic contained in the packaging should be taken to your public collection points.

Warranty Information

The guarantee period is for 3 years as of date of purchase. For any guarantee claims, please have your proof of purchase ready, and phone our hotline:

GB
TARGA GmbH
Postfach 22 44
D-59482 Soest
Germany

Phone: 0207 - 36 50 744
www.service.targa.de

IE
TARGA GmbH
Postfach 22 44
D-59482 Soest
Germany

Phone: 01 - 242 15 83
www.service.targa.de

Introduktion

Tak, fordi du købte dette vækkeur med vibrationsalarm.

Dette vækkeur afgiver en alarmlyd, udsender et blinkende lys og, hvis ønsket, vibrerer. Displayet viser dato og tidspunkt.

Pakkens indhold

- Vækkeur VWS2010
- Vibrationsplade
- Brugervejledning med serviceinformation
- Strømadapter TYT70600030EU
  6 V⎓, 300 mA

Indholdsfortegnelse

Introduktion 23
Pakkens indhold 23
Indholdsfortegnelse 24
Vigtige sikkerhedsanvisninger 25
Betjeningsforhold 25
Børn og personer med handicap 26
Strømadapter og batterier 27
Beregnet brug 28
Konformitetsbemærkning 29
Oversigt 30
Displayet 32
Komme i gang 33
Tilslutning af strømadapteren 33
Isætning af batterierne 33
Indstilling af sprog 35
Betjening 35
Indstilling af tid og dato 35
Indstille alarmen 37
Tilslutning af vibrationspladen 38
Gentag alarm 39
Vælge alarmlyd 39
Tillæg 40
Reparation og vedligeholdelse 40
Tekniske specifikationer 41
Bortskaffelse af gamle og defekte enheder 42
Garantioplysninger 43
Konformitetserklæring 44

Vigtige sikkerhedsanvisninger

Før du tager dette apparat i brug første gang, bedes du læse nedenstående anvisninger og overholde alle advarsler, også selvom du i forvejen er fortrolig med at håndtere elektroniske apparater. Opbevar denne vejledning på et sikkert sted til fremtidig brug. Hvis du sælger eller videregiver dette apparat til andre, er det meget vigtigt, at denne vejledning vedlægges.

Dette ikon markerer vigtige oplysninger for sikker betjening af produktet og for brugerens sikkerhed.

Dette symbol betyder, at der er mere information om emnet.

Betjeningsforhold

Apparatet er ikke beregnet til brug på steder, hvor temperaturen eller luftfugtigheden er høj (f.eks. i badeværelser), og det skal holdes frit for støv. Anvendelsestemperatur og luftfugtighed: 5° C til 40° C, maks. 90% RH. Enheden må ikke anvendes udendørs eller i tropisk klima. Dette produkt er ikke beregnet til virksomheds- eller erhvervsmæssige

applikationer. Brug kun produktet i husholdningen til private formål. Enhver anden anvendelse, end den ovenfor nævnte, er i strid med den beregnede brug.

Sørg altid for, at:

- der ikke er direkte varmekilder (f.eks. rumopvarmning), som kan påvirke apparatet
- apparatet ikke bliver udsat for direkte sollys eller kunstig belysning
- apparatet aldrig placeres umiddelbart i nærheden af magnetfelter (f.eks. højttalere)
- der ikke placeres brændende genstande (f.eks. tændte stearinlys) på eller i nærheden af apparatet
- der ikke indføres fremmedlegemer i apparatet
- apparatet ikke udsættes for store temperaturudsving
- Sæt ikke beholdere med væske (som f.eks. vaser eller drikkevarer) oven på eller ved siden af udstyret

Børn og personer med handicap

Elektriske apparater hører ikke til i hænderne på børn. Personer med handicap må kun bruge elektriske apparater under passende omstændigheder. Lad ikke børn eller handicappede personer bruge elektriske apparater uden opsyn. De er måske ikke i stand til at forstå den mulige

fare. Batterier og smådele er forbundet med kvælningsfare. Opbevar batterierne på et sikkert sted. Hvis et batteri sluges, skal der straks søges lægehjælp. Lad ikke børn eller handicappede personer komme i nærheden af emballagen, da den kan forårsage kvælning.

⚠ Strømadapter og batterier

For at frakoble apparatet helt fra lysnettet skal du tage adapteren ud af stikkontakten. Derfor skal apparatet være placeret på en sådan måde, at der er uhindret adgang til stikkontakten, så strømadapteren straks kan trækkes ud i en nødsituation. For at undgå brandfare, hvis strømforsyningen ikke skal anvendes i længere tid (f.eks. i ferier), skal den altid tages ud af stikkontakten.

I tordenvejr tages strømadapteren fra stikkontakten for at undgå skader på udstyret.

Isæt batterierne med den korrekte polaritet. Forsøg aldrig at oplade batterierne, og de må under ingen omstændigheder kommes på åben ild. Tag batterierne ud, hvis apparatet ikke skal bruges i længere tid. Ikke-tilsigtet brug kan forårsage eksplosion og livsfare.

Beregnet brug

Dette er en forbrugerteknisk enhed. Den må kun anvendes til privat brug, ikke til industrielle eller kommercielle formål. Dette produkt er i standardkonfigurationen ikke beregnet til medicinsk, livreddende, rednings- eller livsopretholdende formål. Desuden må enheden ikke anvendes i tropisk klima. Der må kun anvendes forbindelsesledninger og eksternt udstyr, som overholder sikkerhedsstandarderne samt den elektromagnetiske kompatibilitet og skærmningskvaliteten, som gælder for dette apparat. Dette apparat overholder alle aspekter af EU-overensstemmelse, relevante normer og standarder. Modificering af udstyret, ud over ændringer som anbefalet af producenten, kan medføre, at apparatet ikke længere overholder disse standarder. Producenten er ikke erstatningsansvarlig for eventuelle skader eller interferens forårsaget af uautoriserede modifikationer. Anvend kun det tilbehør, som er anbefalet af producenten. Brug ikke dette apparat til andre formål end de, der er angivet, og forsøg ikke at ændre på apparatet på nogen måde. Enhver anden anvendelse, end de oven for nævnte, er i strid med den beregnede brug.

Konformitetsbemærkning

Denne enhed er afprøvet og godkendt for overholdelse af de grundlæggende og øvrige relevante krav i EMC-direktiv 2004/108/EC, Lavspændingsdirektiv 2006/95/EC samt de økologiske designkriterier i henhold til Kommissionens Regulativ 27/2009 om implementering af R&TTE-direktivet 2009/125/EC. Den tilhørende konformitetserklæring kan også findes i slutningen af denne Brugervejledning.

Oversigt

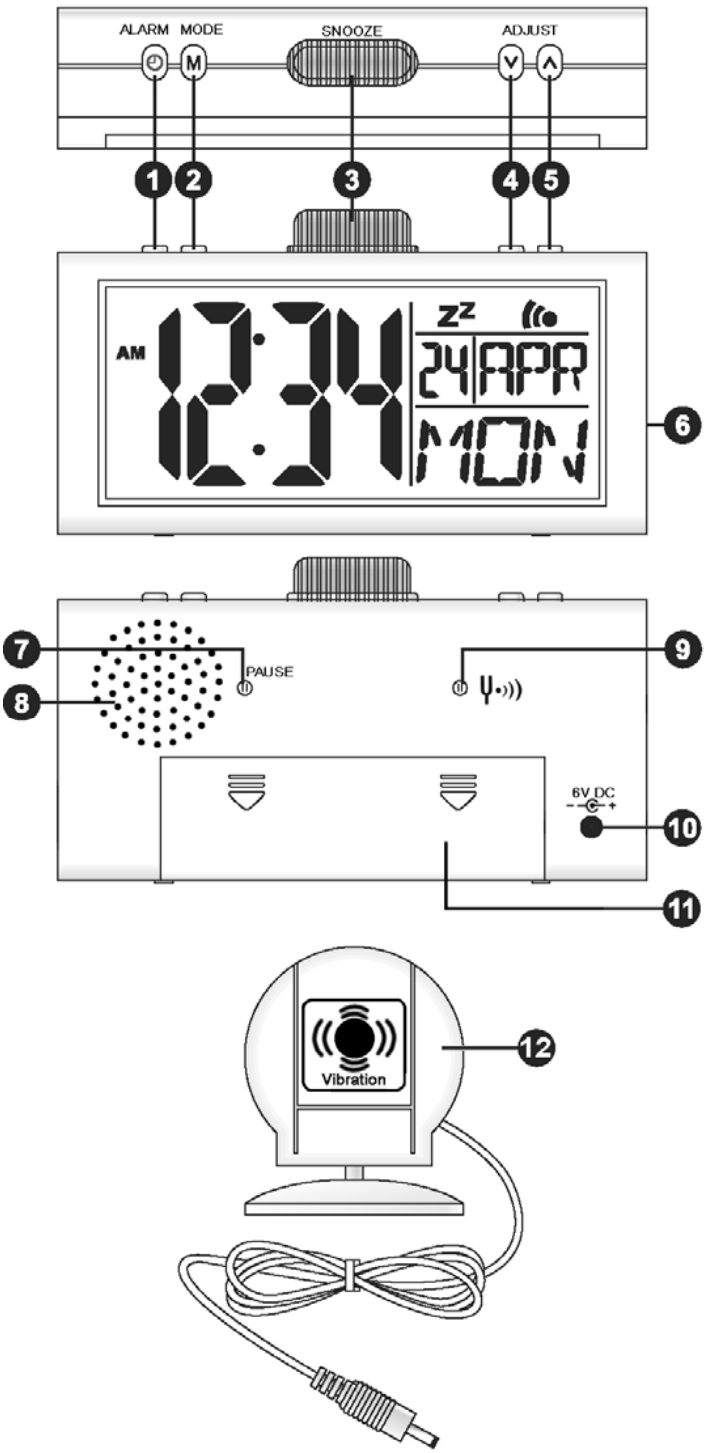
ALARM
MODE
SNOOZE
ADJUST
1
2
3
4
5
AM
12:34
24 APR
MON
6
7
8
PAUSE
9
6V DC
10
11
Vibration
12

1 ALARM
Slår alarmen til og fra: vælg mellem fire forskellige alarmtidspunkter

2 MODUS
Indstil tid, dato og alarmtidspunkt

3 SNOOZE
Gentager alarmsignalet efter 9 minutter

4 JUSTÉR ▼ (Foregående indstilling)

5 JUSTÉR ▲ (Næste indstilling)

6 Kontakt til vibrationsplade

7 SNOOZE STOP
Standser gentagelse af alarmen

8 Højttaler

9 TONE
Vælger alarmlyden

10 Kontakt til strømadapter

11 Batterirum (bruger 4 stk. AA-batterier)

12 Vibrationsplade med fod og forbindelsesledning

Displayet

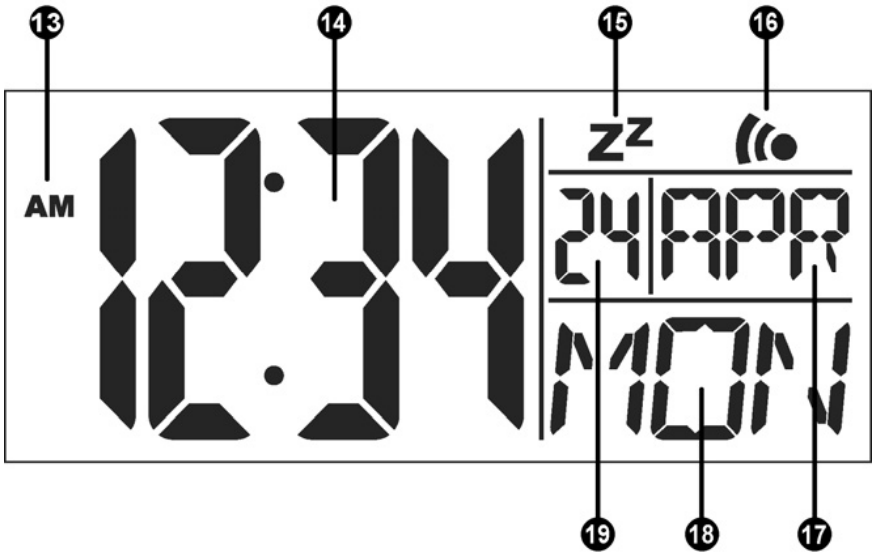

13 Morgen- og eftermiddagsikoner
AM: Morgen
PM: Eftermiddag

14 Tid

15 Gentag alarmikon

16 Alarm aktiveret-ikon

17 Månedsindikator

18 Ugeindikator

19 Dagsindikator

Komme i gang

Tilslutning af strømadapteren

For at frakoble apparatet helt fra lysnettet skal du tage adapteren ud af stikkontakten.

Du kan også vælge at strømforsyne apparatet med almindelige batterier. Brug ikke begge strømforsyningsmetoder samtidig. Fjern batterierne, før strømadapteren tilsluttes.

- Sæt forbindelsesledningen fra strømadapteren ind i stikket på apparatet.
- Slut strømadapteren til en stikkontakt, der er nem at komme til.

Hvis apparatet har været koblet fra strømforsyningen, skal det indstilles på ny, når det tilsluttes til strømforsyningen igen.

Isætning af batterierne

Du kan bruge batterier til at strømforsyne apparatet. Dertil bruges fire 1.5 V batterier størrelse AA (medfølger ikke).

- Åbn vækkeurets batterirum (11) ved at skubbe bagpaneldækslet i pilens retning.

- Sæt batterierne (størrelse AA) i apparatet. Sørg for, at batterierne sættes med korrekt polaritet (+ og -). Den korrekte polaritet er markeret på batterierne og på indersiden af batterirummet.

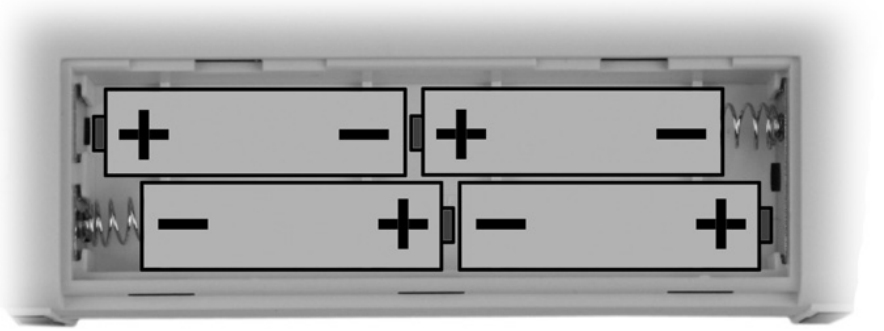

- Skub batterirumsdækslet på plads på vækkeuret.

Når displayet fremstår meget svagt, er det tid til at udskifte batterierne. Når dette sker, skal batterierne erstattes af nye batterier af samme type. Efter udskiftning af batterierne er det nødvendigt at indstille alle parametrene igen.

Indstilling af sprog

Når du tænder for apparatet, er sproget indstillet til English, og dagsindikatoren blinker med landekoden "GB". Du kan vælge mellem de følgende sprog:

GB	Engelsk
FR	Fransk
NL	Hollandsk
PT	Portugisisk
ES	Spansk
DE	Tysk
DK	Dansk

- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge det ønskede sprog.
- Tryk på MODUS-knappen (2) for at gemme indstillingerne.

Betjening

Indstilling af tid og dato

- Tryk på og hold MODUS-knappen (2) inde, indtil timeindikatoren på displayet blinker.
- Brug JUSTER ▼ (4) eller JUSTER ▲ (5) til at vælge timetallet for det aktuelle tidspunkt.

- Tryk på og hold MODUS-knappen (2) inde, indtil minutindikatoren på displayet blinker.
- Brug JUSTER ▼ (4) eller JUSTER ▲ (5) til at vælge minuttallet for det aktuelle tidspunkt.

- Tryk på og hold MODUS-knappen (2) inde, indtil månedsindikatoren på displayet blinker.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge den ønskede måned.

- Tryk på og hold MODUS-knappen (2) inde, indtil dagsindikatoren på displayet blinker.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge den ønskede dag.

- Tryk på og hold MODUS-knappen (2) inde, indtil årstallet på displayet blinker.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge det ønskede år.

- Tryk på MODUS-knappen (2), så blinker 12- eller 24-timersindikatoren på displayet.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at skifte imellem 12-timers og 24-timers display.

- Tryk på og hold MODUS-knappen (2) inde, indtil det indstillede sprog blinker på displayet.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge det ønskede sprog. Du kan finde en forklaring på de viste forkortelser i skemaet i kapitlet "Indstilling af sprog".

- Tryk på ALARM-knappen (1) for at afbryde processen.

Ugedagen beregnes ud fra de givne oplysninger, og den vises automatisk.

Indstille alarmen

Du kan angive tre forskellige alarmtidspunkter på dette vækkeur. Ved at trykke på ALARM-knappen (1) flere gange kan man skifte imellem de fire alarmtidspunkter på displayet.

- Tryk på ALARM-knappen (1) så mange gange, det er nødvendigt, indtil du kan se det alarmtidspunkt, som du vil ændre eller indstille.
- Tryk på og hold MODUS-knappen (2) inde, indtil valgmuligheden ON/OF (16) på displayet blinker.
- Tryk på JUSTER ▼ (4) eller JUSTER ▲ (5) for at vælge mellem ON (alarm aktiveret) eller OFF (alarm deaktiveret).

- Tryk på og hold MODUS-knappen (2) inde, indtil timeindikatoren på displayet blinker.
- Brug JUSTER ▼ (4) eller JUSTER ▲ (5) til at vælge timetallet for det ønskede alarmtidspunkt.

- Tryk på og hold MODUS-knappen (2) inde, indtil minutindikatoren på displayet blinker.
- Brug JUSTER ▼ (4) eller JUSTER ▲ (5) til at vælge minuttallet for det ønskede alarmtidspunkt.

- Tryk på ALARM-knappen (1) for at afbryde processen.
- Et aktiveret alarmtidsikon (16) vises på displayet.

Tilslutning af vibrationspladen

Du kan vælge at montere vibrationspladen (12) på den vedlagte fod eller lade den være uden fod for at kunne placere den f.eks. under hovedpuden. Når alarmtidspunktet kommer, vibrerer vibrationspladen, og signallyset blinker.

- Sæt forbindelsesledningsstikket fra vibrationspladen ind i kontakten (6).
- Læg eller stil vibrationspladen i den ønskede position.

Gentag alarm

Funktionen Gentag alarm slås automatisk til, og ikonet for Gentag alarm (15) blinker. Du kan afbryde alarmen med SNOZZE-knappen (3). Efter ni minutter lyder alarmen igen.

- Du kan deaktivere den aktuelle Gentag alarm på bagsiden af vækkeuret.
- Tryk på PAUSE (7) for at slå funktionen Gentag alarm fra.
- Ikonet for Gentag alarm (15) lyser fast på displayet.

Vælge alarmlyd

- Tryk flere gange på TONE-knappen (9) på bagsiden af apparatet for at vælge én af de seks forskellige alarmlyde.

Tillæg

Reparation og vedligeholdelse

Reparation er nødvendig, hvis apparatet er blevet beskadiget på nogen måde, f.eks. ved at der er trængt væske eller fremmedlegemer ind i kabinettet, hvis apparatet har været udsat for regn, hvis det ikke fungerer korrekt, eller hvis det er blevet tabt. Hvis der bemærkes røg, mærkelige lyde eller lugte, skal strømadapteren eller batterierne straks fjernes. Hvis det sker, bør apparatet ikke bruges længere, og det bør efterses af et autoriseret serviceværksted. Kontakt et serviceværksted, hvis der er behov for reparation af apparatet. Kabinettet og vibrationspladen må aldrig åbnes. Brug kun en ren, tør klud til rengøring af apparatet. Brug aldrig rengøringsmidler med nedbrydende effekt.

Tekniske specifikationer

Model	Vibrerende vækkeur Auriol VWS2010
Strømforsyning	Strømadapter TYT70600030EU TaiyTech Input: 100-240 V~ 50/60 Hz Output: 6V ⎓ 300 mA eller 4 stk. AA-batterier 1,5 V
Power consumption	6V / 300mA
Driftstemperatur og luftfugtighed	5° C til 35° C, maks. 90% RH
Opbevaringstemperatur og luftfugtighed	5° C til 45° C, maks. 90% RH
Vægt for vækkeur og vibrationsplade	311 g
Vækkeurets dimensioner	168 x 80 x 40 mm (B x H x D)

Bortskaffelse af gamle og defekte enheder

Apparater mærket med dette symbol er underlagt det europæiske Direktiv 2002/96/EC. Alle elektriske og elektroniske apparater skal bortskaffes særskilt fra husholdningsaffald på dertil indrettede steder.

Skån miljøet, og undgå farer for dit eget helbred ved at bortskaffe apparatet på korrekt vis. Hvis du vil have yderligere oplysninger om korrekt bortskaffelse, skal du kontakte kommunen eller genbrugspladsen.

Beskyt miljøet. Gamle batterier hører ikke til i det almindelige husholdningsaffald. De skal afleveres på et indsamlingssted for opbrugte batterier. Genbrug også emballagen på korrekt vis. Emballagepap kan returneres til papirindsamlingscontainere eller offentlige genbrugspladser. Folie og plastik i pakken skal afleveres på genbrugsstationen.

Garantioplysninger

Garantiperioden løber i 3 år fra købsdatoen. Ved garantikrav bedes du finde købsbeviset og derefter ringe til vores hotline.

(DK) TARGA GmbH
Postfach 22 44
D-59482 Soest
Tyskland

Telefon: 38 - 322 953
www.service.targa.de

EC-Declaration of Conformity

Address:	Targa GmbH Lange Wende 41 59494 Soest, Germany
Product:	Vibration Clock
Model:	Auriol VWS 2010

The product complies with the requirements of the following European directives:

2004/108/EC	Electromagnetic Compatibility
2006/95/EC	Low Voltage
2009/125/EC	Energy Relating Products

Compliance was proved by the application of the following standards:

EMC:	EN 55013: 2001 + A1: 2003 + A2: 2006 EN 55020: 2007 EN 61000-3-2: 2006 EN 61000-3-3: 1995 + A1: 2001 + A2: 2005
Safety:	EN 60065: 2002 + A1: 2006 + A11: 2008
ErP:	Regulation 278/2009
Year of CE marking:	2010

Soest, 19th of April 2010

Matthias Klauke, Managing Director

CE

TARGA GmbH
Lange Wende 41
D-59494 Soest
www.service.targa.co.uk

Mat-No: 1544279

3C